

TVONICS

New Features User Guide Addendum

Models: DTR-HD500 / DTR-Z500HD – Software Version V1.2.A1550.D280.F100 onwards

EPG and Library search function


These models now include a search function within the Guide and Library. This function enables you to enter text to search for any programme that has that text in the title, Description or both as well as “contains” or “starts with”, you can even search TV, Radio or both (On EPG).

To use this function simply start the GUIDE / Library and press the >>| or |<< button on the remote and then press Green. Note: that in the released user guide the Swap (symbol) allows switching between 24 hour step and 4 hour step, in this new feature this button also toggles between the normal options and the ones below-

For GUIDE (EPG)




The following screen is displayed

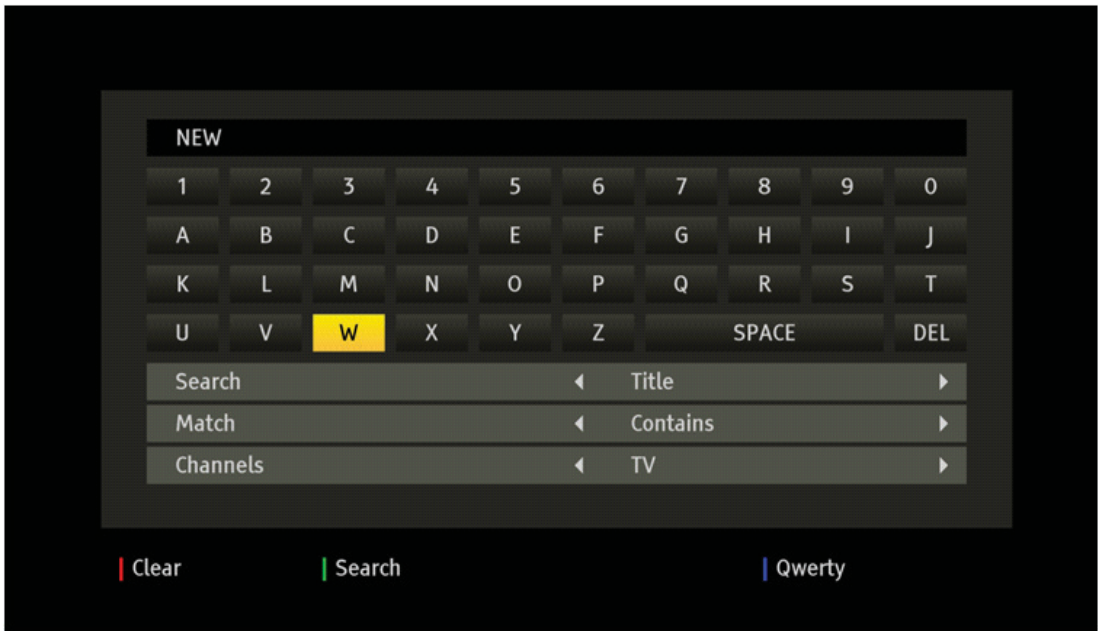

To	Press
Move around the keyboard	[Up/down/left/right] [Ok] to select
Delete text entry	[RED] Button
Change search to Title/Description etc	[Down] to highlight and [left/right] to change
Toggle keyboard style	[BLUE] Button
Search EPG / Library	[GREEN] Button

Search results in the Guide are shown -

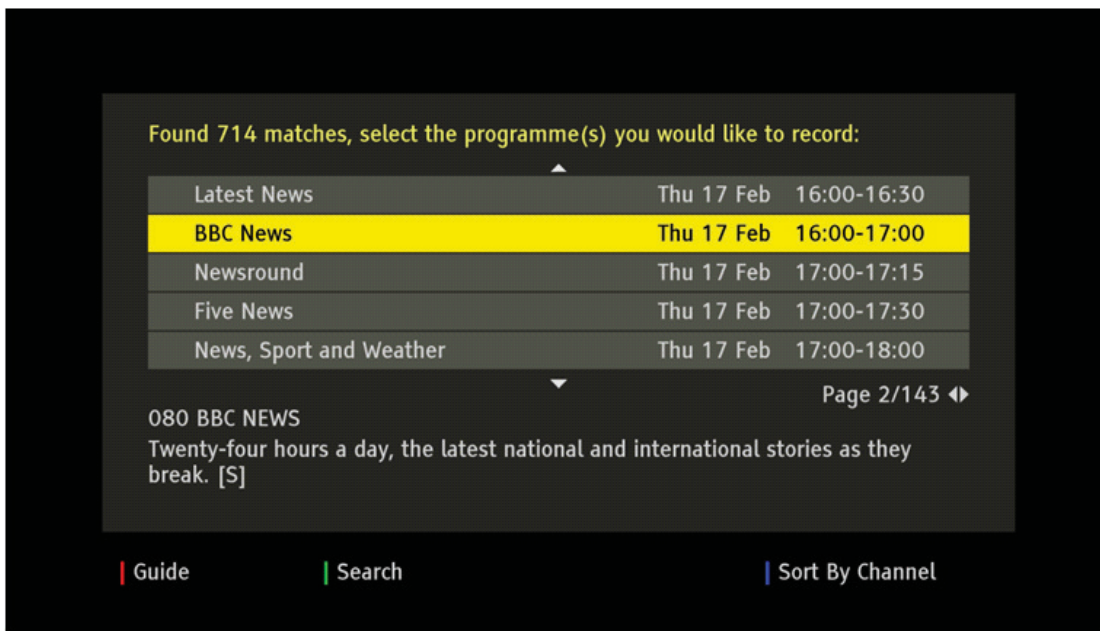


To


- Move around the list
- Sort list by Channel / Date
- Return to Search screen
- Return to GUIDE
- To make a recording on search list
- For Library

Press

- [UP/DOWN] Buttons
- [BLUE] Button
- [GREEN] Button
- [RED] Button
- Make selection and press [•] Button

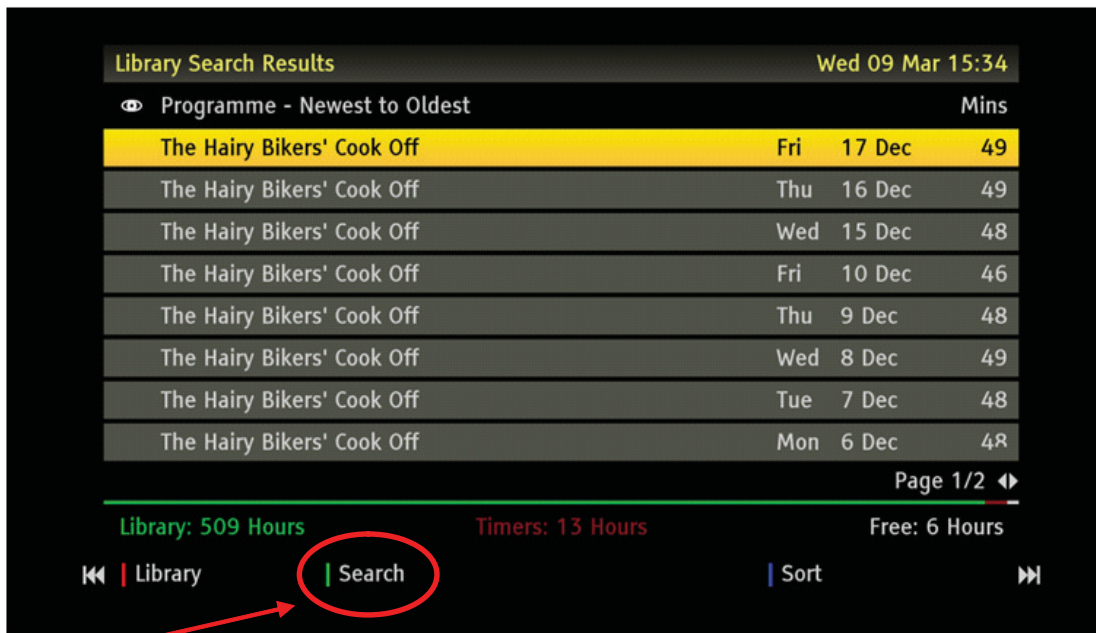


The search screen is similar to that for the Guide, but the TV/Radio channel option is required. Following a search for “bike” the results screen is shown

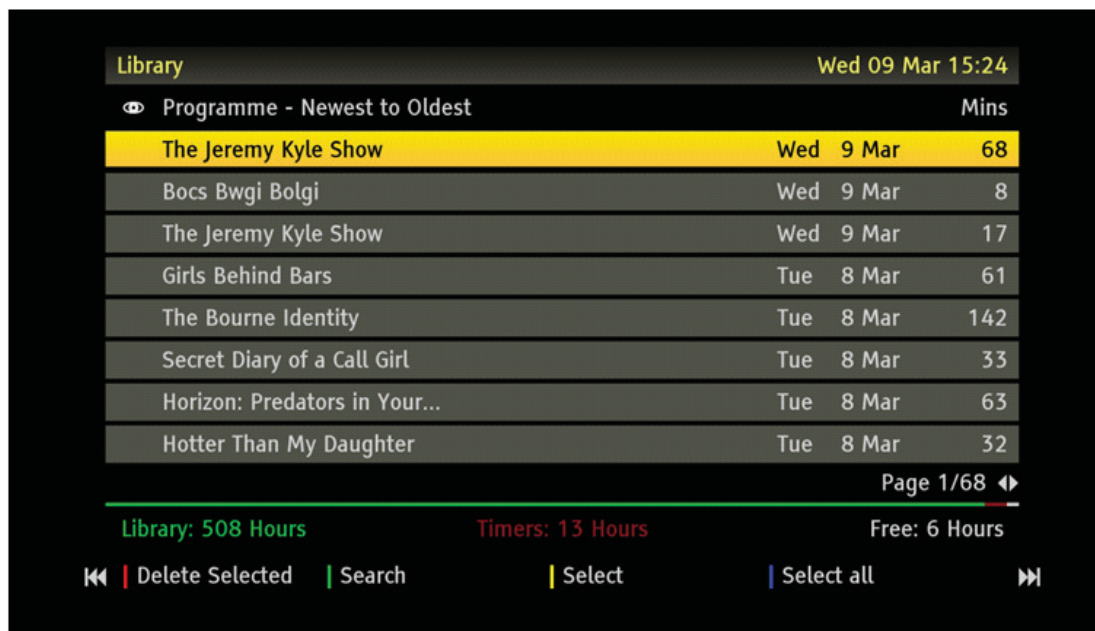

To	Press
Move around the list	[UP/DOWN] Buttons
Sort list by Channel / Date	[BLUE] Button – see explanation below
Return to Search screen	[GREEN] Button
Return to full Library	[RED] Button

 The sort function of the Library has been modified to make it easier to use. When the Blue button is pressed the following screen is shown –

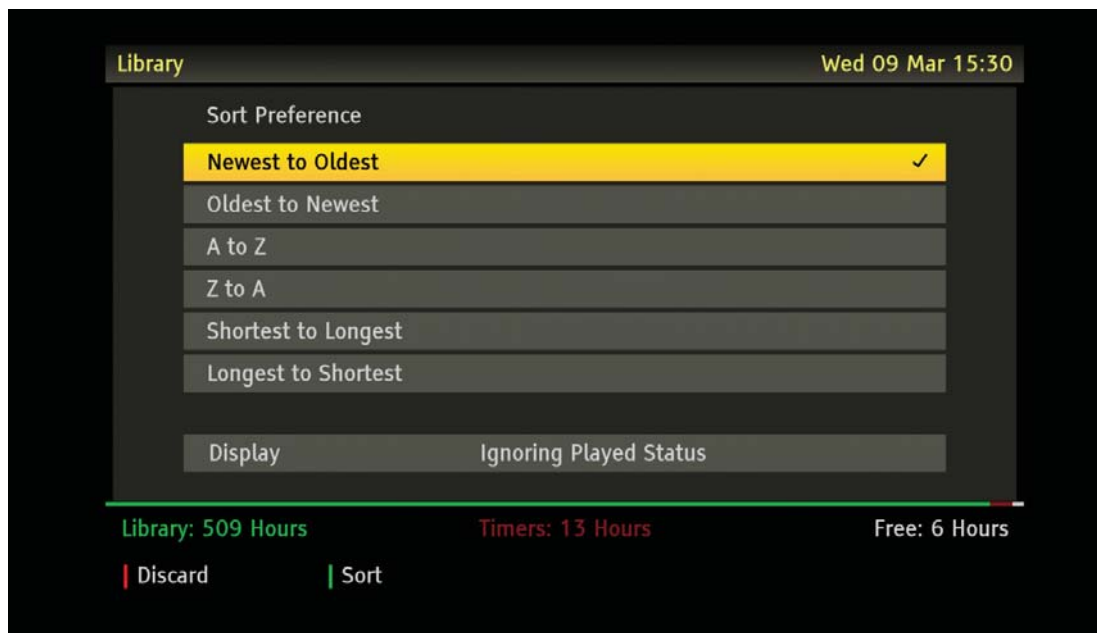


This allows sorting on the main Library and within the search function.

To	Press
Move around the list	[UP/DOWN] Buttons
Sort the Library / search	[GREEN] Button
Return Discard sort / return to Search screen	[RED] Button

Library multiple delete function

 This useful function allows you to select one or several library recordings and delete them all at once.

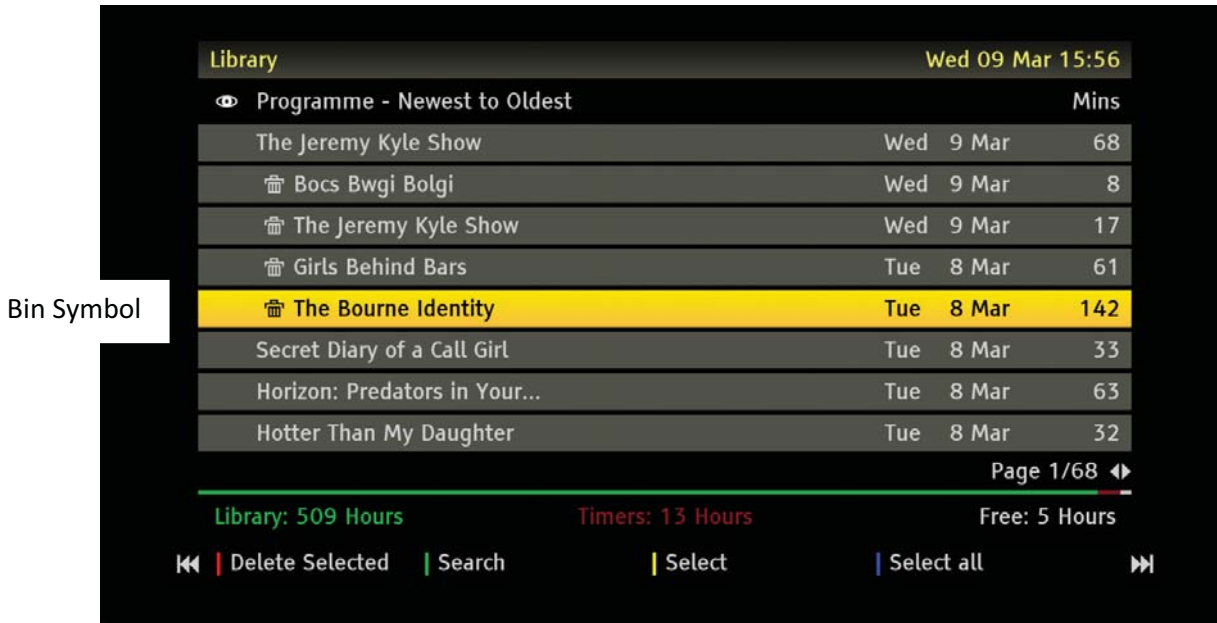

With the Library loaded press the >>| or |<< on the remote,

To	Press
Move around the list	[UP/DOWN] Buttons
Select recording to delete	[YELLOW] Button
Select all recordings on the <u>current page</u>	[BLUE] Button
Delete selected recordings	[RED]

Note this function can be used at the same time as the Sort and Search function.

Example: it is possible to search for all the recordings that start with “car”, sort that list into oldest first, and then delete them all at the same time.

Thank you for choosing this TVonics Digital TV recorder product.